

## UP TO 30% MORE HORSEPOWER 10-20% FUEL SAVINGS

### CONNECT — JOHN DEERE 6.8L — TIER III ENGINES

## JD2683 MODULE INSTALLATION GUIDE

### AGDIESELSOLUTIONS.COM





Ag Diesel Solutions recommends removing the module before any warranty work is performed on the piece of equipment the module is installed on.

### For Tech Support Please Call 812-618-9168

### **Switch Settings**

Position 1- Stock (counter clockwise) Position 2- Low- Up to 15% HP Position 3- High- Up to 30% HP \*Mechanical switch will overide use of App settings




OR App on your Android or iOs devices using the code below, or by searching <u>"Ag Diesel</u> <u>Connect"</u> in your app store.



Module switch can be ran inside the cab for easy performance adjustment. Module switch can be secured in engine bay if desired. Module will default to HIGH setting if switch is not connected.

\*MODULE DOES NOT BYPASS, DELETE, OR DEFEAT ANY EMISISON CONTROL SYSTEMS\* \*If installation assistnace is needed, Ag Diesel Solutions is not responsible for any cost associated with third party installation.

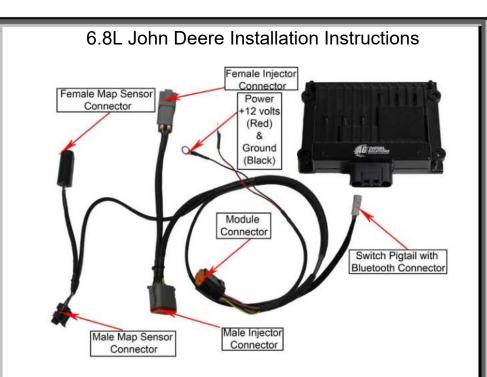

1) Locate the injector connector on the side of the engine head.



2) Remove the stock injector connector from the engine head. Squeeze the release tabs on each side together to remove the connector.



**3)** Plug the male connector from the module into the stock female connector on the engine head.



**4)** Plug in the stock male injector connector that was removed in Step 2, to the female injector connector from the module.



5) Locate the MAP sensor and unplug. It is on the same side of the engine as the air intake and near the injector connector.



6) Check inside the MAP sensor located on the air intake for a plastic insert. If there is a plastic insert, you will need to remove it and place it over the stock MAP sensor connector that you removed in Step 5.






7) Plug the male MAP sensor connector removed in Step 5 to the female connector on the module harness. Plug the male MAP sensor connector from the module harness into the stock MAP sensor located on the air intake.





 Route the red power wire with the ring terminal to the alternator. Connect the red wire to +12 volts. Connect the black wire with the ring terminal to Ground.

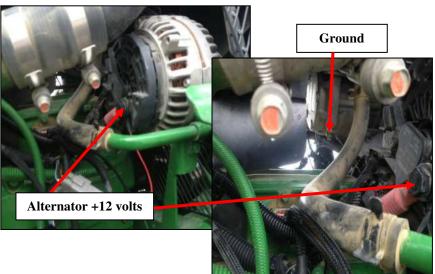

**9)** Mount the module with the connector on the bottom side, as to reduce the chance of moisture from getting into the module harness. Keep away from excessive heat and moving parts. Note: Zip tie onto the factory computer wire harness works well. Mounting the module as shown will help prevent moisture from collecting into the module connector.



# For any questions on this installation please call Tech Support at 812.618.9168





### SOLUTIONS FARM SMART. FARM EFFICIENT. Why Ag Diesel Solutions Modules ? \_\_\_\_\_

Saving More Fuel Per Hour with 10-20% Returns Getting More Done -- Up to 30% More Horsepower and Torque

No Programming of the Factory ECM or Changes to Fuel Pressure

Linear Based Log d Technology - Only Giving Power when You Need It

Peace of Mind with USA Based Tech Support and a 30 Day Money Back Guarantee

No Loss of Product Benefits if Factory Tuning is Required Reduce Downtime - Install Yourself - No Tech Needed

Tran<mark>sf</mark>erable to New Machines with Same Engine Does Not Defeat or Delete Any Engine Components



Engineered, Manufactured, Tested and Proven in the

**U.S.A** 3 Year Warranty



# THIS IS A HIGH PERFORMANCE PRODUCT. USE AT YOUR OWN RISK.

Do not use this product until you have carefully read the following agreement. This sets forth the terms and conditions for the use of this product. The installation of this product indicates that the BUYER has read and understands this agreement and accepts its terms and conditions

# DISCLAIMER OF WARRANTY AND LIMITATION OF LIABILITY

PSI Power, Inc and its successors, distributors, jobbers, and dealers (hereafter "SELLER") shall in no way be responsible for the product's proper use and service. It is the installer's responsibility to check for proper installation and if in doubt, contact the manufacturer. The SELLER assumes no liability regarding the improper installation or misapplication of its products. BUYER ACKNOWLEDGES IT HAS HAD THE OPPORTUNITY TO FULLY INSPECT THE PRODUCT. ACCORDINGLY, BUYER ACKNOWLEDGES THAT THE PRODUCT IS BEING SOLD IN "AS IS/WHERE IS" CONDITION AND WITH ALL FAULTS. EXCEPT AS OTHERWISE PROVIDED HEREIN, THERE ARE NO EXPRESS WARRANTIES WITH RESPECT TO THE GOODS, AND ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY ARE LIKEWISE HEREBY EXPRESSLY AND FULLY DISCLAIMED. SELLER SHALL NOT BE HELD LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WITH RESPECT TO THE PRODUCTS (INCLUDING, WITHOUT LIMITATION, LOST PROFITS, LOST SALES, LOSS OF PRODUCTION, PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OR DAMAGE RESULTING FROM INTERRUPTION OR FAILURE IN OPERATION OF THE PRODUCTS) AND BUYER HEREBY EXPRESSLY WAIVES AND DISCLAIMS ALL SUCH LIABILITY CLAIMS. THE BUYER ACKNOWLEDGES AND AGREES THAT THE DISCLAIMER OF LIABILITY CONTAINED HEREIN IS A MATERIAL TERM OF THE SALE OF THE PRODUCT AND, TO THE FULLEST EXTENT PERMITTED BY LAW, BUYER SHALL DEFEND, INDEMNIFY AND HOLD SELLER HARMLESS FROM ANY AND ALL CLAIMS, DEMANDS, CAUSES OF ACTION, CONTROVERSIES, LIABILITIES, FINES, LOSSES, COSTS AND EXPENSES (INCLUD-ING, BUT NOT LIMITED TO ATTORNEYS' FEES. EXPERT WITNESS EXPENSES AND LITIGA-TION EXPENSES) ARISING FROM OR RELATED TO SELLER'S PRODUCTS.

#### LIMITED 3 YEAR WARRANTY

PSI Power, INC. (hereafter "SELLER") warrants that the product supplied shall conform to SELLER's specifications and shall be free from defects in design, material or workmanship for 3 years to the original BUYER. This warranty shall not be extended, transferred, assigned or varied except by a written instrument signed by SELLER and BUYER. Products that have been returned to SELLER during the warranty period and accompanied by a dated proof of purchase receipt, with shipping and handling paid by the BUYER, and found to be defective in design, material, or workmanship, in SELLER's sole discretion, may be repaired or replaced at SELLER's option and cost. All warranty claims hereunder are subject to approval by SELLER upon examination of the product. If the product is found not to be defective by SELLER, the product may be returned to BUYER at BUYERS cost. Under no circumstances shall the SELLER be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product or any other expenses. This warranty is void on any products that show evidence of misapplication, negligence, improper installation, abuse, lack of proper maintenance or alteration from its original design.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT, THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, IN THE ORIGINAL PACKAGING, WITH A DATED PROOF OF PURCHASE, TO THE PLACE OF PURCHASE WITHIN (30) DAYS FROM THE DATE OF PURCHASE FOR A FULL REFUND. THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDER-STANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS Effective 11/1/2022



• UP TO 30% HORSEPOWER INCREASE

- UP TO 10%-20% IN FUEL SAVINGS
- DOES NOT FLASH THE FACTORY ECM
- FIELD TESTED & DYNO PROVEN
- PLUG & PLAY INSTALLATION

Performance Electronics for Agriculture, Forestry, Construction, Pick-Up Trucks, Medium Duty Trucks, RVs, Heavy Duty Semis , and more!







LEARN MORE: AGDIESELSOLUTIONS.COM

 $\left[ \mathbf{O} \right]$ 

You Tube